




# FROZEN UNCARBONATED BEVERAGE (FUB) DISASSEMBLY & CLEANING PROCEDURES


## TOOLS YOU WILL NEED:

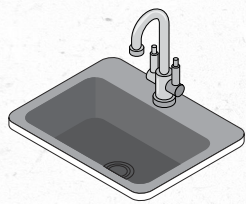

Sink



Approved Sanitizer

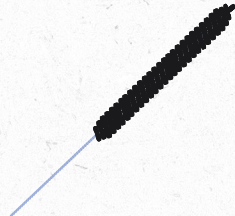

Nozzle Brush



Clean Cloths




Clean Empty Spray Bottle

**!** IMPORTANT: DO NOT run nozzles, drip pan or other small parts through a dishwasher and DO NOT USE HOT WATER or BLEACH.


## Disassembly and Cleaning




**1** Turn cooling to **OFF** selection. Empty all product from the hoppers. Turn auger to the **OFF** selection.

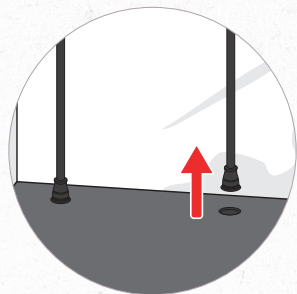

**2** Disconnect the hopper lid cords on the back of the hoppers.

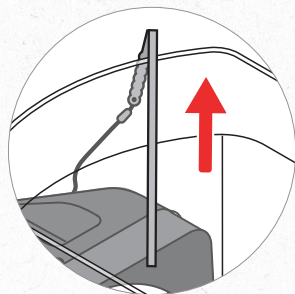

**3** Disconnect the level probes (if installed) at the top rear of the hoppers.

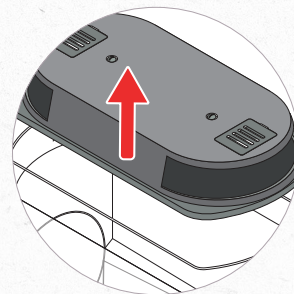


**4** Remove hopper lids.




**IMPORTANT**

If it is an autofill unit, disconnect the fill hoses from the back of the hoppers before continuing to Step 5.

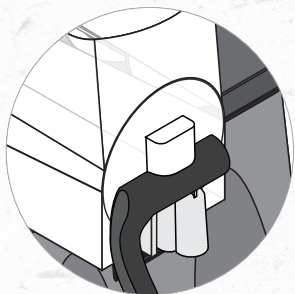


**5** Remove the faucet assembly.


**CAUTION:** The faucet valve is under spring tension. Use tab on the left side of the handle to pull off pivot pin.

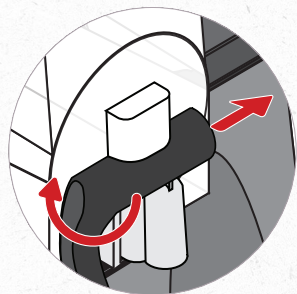


**6** Remove handles by:  
a. Slightly twisting the handle, then pulling the left side of the left pin.  
b. Next, spread handle on right side to remove from right pivot pin.

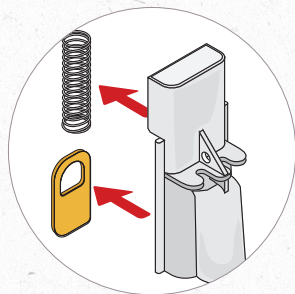


**7** Carefully slide the faucet valve up to remove the spring and faucet seal.  
**NOTE:** Extra care should be taken when handling the seal to prevent damage. Do not fold the seal as this will cause damage to the Teflon sealing surface.

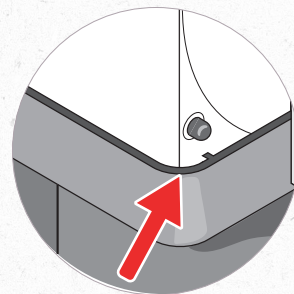


**8** Depress the hopper lock plunger and lift the hopper up slightly.

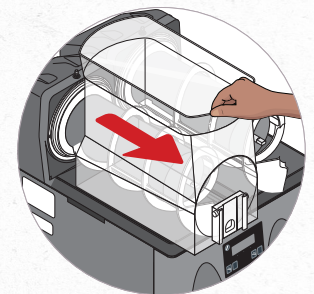

**9** Pull hopper forward to remove.

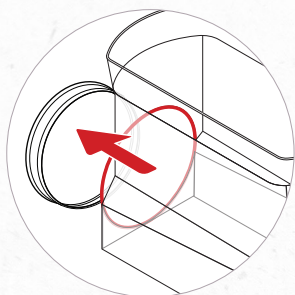

**10** Remove Ultra-NX hopper seal from the back of the hopper.\*

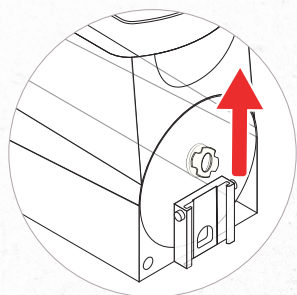


**11** Remove auger nose bushing from inside the hopper.




**IMPORTANT**


Care must be taken to ensure area around faucet surface does not get scratched during cleaning. Deep scratches could cause leakage around the seal.

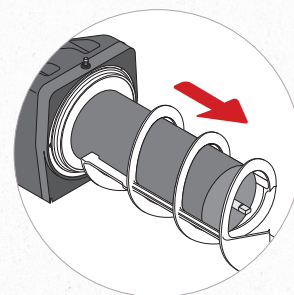


**12** Pull auger from cooling drum.

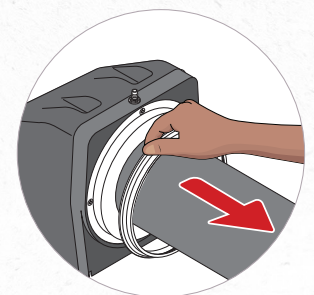


**13** Remove Ultra-2 hopper seal from the base of the cooling drum.\*

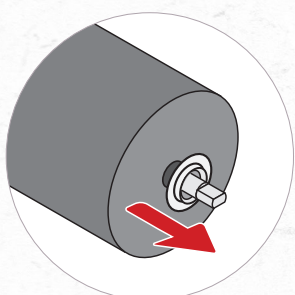

**14** Pull grommet from cooling drum.

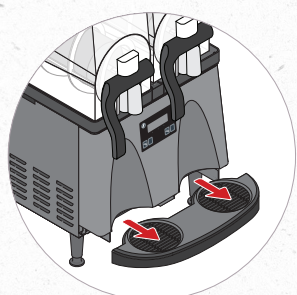

**15** Remove drip tray.

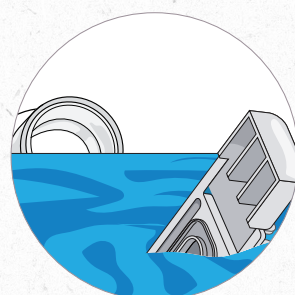

**16** Wash parts and place in a clean sink with food-grade sanitizer solution. Soak for 5 minutes. Use a clean, soft bristle brush as needed.  
**NOTE:** Do not immerse hopper lids in liquid and use an approved sanitizer to clean.



**17** Clean the cooling drums, hoppers, drip trays and outside enclosure using a clean cloth that has been soaked in sanitizer solution. Wipe down surfaces with another cloth soaked in warm water only and then dry with a fresh clean cloth.  
**NOTE:** Make sure shaft area is thoroughly cleaned.

Cleaning frequency should be based on product being served. For dairy based products, cleaning should take place daily, while non-dairy based products should take place weekly.

\*When disassembling, the step of removing the hopper seal from the machine will vary based on the type of hopper seal (Ultra-NX or Ultra-2). Please follow the indicated machine note for hopper seal.

**NEED ASSISTANCE?** The myCoketech Team is here to help.  
Go to [myCoke.com/ESPortal](https://myCoke.com/ESPortal) or call/text 1-800-241-COKE (2653)

