

TROUBLESHOOTING

DUICK CHECKLIST BEFORE YOU CALL

Save Time & Money

Priming the unit







Prime pump using the * key

Purging the water system of air



Turn key to FLUSH position



Place a cup beneath the leftmost dispensing nozzle



Press the PUSH button (clear stream will be visible)

Note: Repeat Steps 2 & 3 for all valves progressing from left to right



Turn key to ON mode



Press the PUSH button to dispense a small amount from each valve until product is visible

Service Menu Interface



OR



Navigate the service menu by pressing the and buttons to scroll up or down the list. Press the PUSH button to accept the current selection. When presented with a Yes/No option, press for No and for Yes.

