Colla freestyle. 7000 User Guide



Contents

C	EQUIPMENT	<u> </u>
	External compo	nents4
	Internal and bac	kroom components5

OPERATIONS
Ways to pour a drink6
Pouring with ADA interface7
Mobile pour
Filling the ice bin9
Accessing the ingredient summary
and crew dashboard10
Understanding the ingredient summary 11
Understanding the crew dashboard12
Cartridge prime procedure13
Manager lock mode14
Calorie counter display15
Using & pairing with myCoke mobile app16



For crew training videos, visit crewconnect.coca-cola.com

This guide provides general tips and proper maintenance procedures for your Coca-Cola Freestyle® 7000 dispenser.

PRODUCT REPLACEMENT

Replacing cartridges and NNS1	18
Replacing HFCS sweetener 2	20
Coca-Cola Freestyle Boost	21
Replacing under-the-counter NNS BIB2	22

MAINTENANCE

Helpful cleaning tips	3
Cleaning nozzle, injector ring, and ice chute	4
Cleaning ice bin25	5
Cleaning drain and cup rest26	5
Cleaning exterior surfaces	7
Cartridge maintenance 28	3

RESOURCES

Small parts)
Crew Connect)


External components

- A Ice bin lid*
- B Cartridge access door
- C Touch screen
- D Nozzle and injector ring
- E Beverage dispense lever
- F Ice chute
- G Ice dispense lever
- H ADA interface
- Cup rest and drain pan

* Not applicable with

top-mounted ice maker

J Key

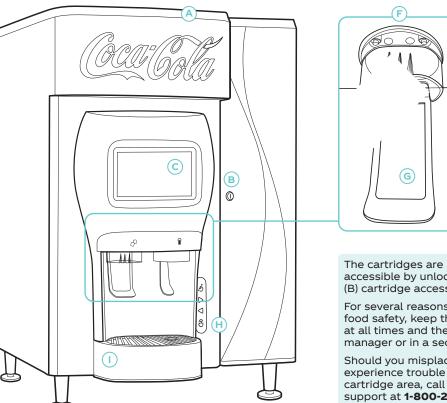

accessible by unlocking the (B) cartridge access door.

For several reasons, including food safety, keep the door locked at all times and the key kept with a manager or in a secured location.

 \bigcirc

Should you misplace your key or experience trouble with accessing the cartridge area, call **MYCOKETECH** for support at 1-800-241-COKE (2653).

COCA-COLA FREESTYLE® 7000 | EQUIPMENT

Internal and backroom components

- A Ingredient cartridge
- B Cartridge tray
- C Brand identification strip
- D Power switch
- E HFCS sweetener*
- F CO, tank


Power Saver Mode:

If the dispenser is inactive for 120 minutes, the screen will go dark. Simply tap the screen anywhere to wake.

Locked Mode: Lock the

dispenser by pressing the lock icon in the top right corner of the crew dashboard. This mode locks the screen and prohibits use during non-operating hours. Choose to lock manually or set an automated time window.

Power Switch: Do not power off unless requested by a Coca-Cola Senior Technician or as instructed for safety when cleaning.

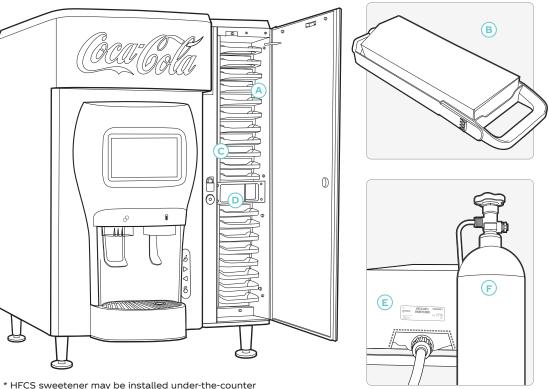

© 2023 The Coca-Cola Company | Confidential information of The Coca-Cola Company | Coca-Cola Freestyle® 7000 User Guide | V6 230123

instead of the backroom.

Ways to pour a drink

Limitless options with three ways to pour.

User interface key

- Primary Brands When a primary brand is selected.
- Empty or Unavailable Brands

Grayed-out brand buttons indicate the brand is out and unavailable.

- Sort Drinks Sort by drink preference.
- Brand Flavors Flavors available for the selected primary brand. The selected flavor is indicated by expanded size.
- **Calorie Counter Display** Shows the drink calorie amount based on size.

(1) Add ice Place your cup under the ice chute and press lever to dispense ice.

(2) Select primary brand

Choose primary beverage brand by pressing the desired Brand Button.



Balance hat you eat, drink & do. Small 10 fl oz 120 cal Medium 12 fl oz 150 cal Large 20 fl oz 240 cal latural flavors.

Select brand flavor by pressing

Flavor Button. Then use the pour

lever to dispense your beverage.

 $(\mathbf{3})$ Select brand flavor

COCA-COLA FREESTYLE® 7000 | OPERATIONS

Pouring with ADA interface

Using the ADA interface

The ADA interface allows people with reach challenges (such as those in wheelchairs) to use the Coca-Cola Freestyle[®] dispenser without having to reach the touch screen.

Assisting guests with pouring drinks

If someone looks like they might need assistance (e.g., he/she is visually impaired or height/reach challenged), tell your quest that you have the Coca-Cola Freestyle dispenser and that you would be happy to assist with their beverage choice.

(2) Press the hand icon to (**B**) select a brand and see all the flavor options.

 $(\mathbf{3})$ Use the arrows to navigate to your favorite beverage.

 $(\mathbf{4})$ Press the hand icon to pour. (\mathcal{C})

(1) Press the accessibility icon to activate the ADA interface. $(\Box)(\Box$

It is up to you to determine whether the above satisfies your legal and operational obligations.




Mobile Pour

How to use Mobile Pour

Mobile Pour allows customers to use their mobile phones to dispense their favorite Coca-Cola Freestyle beverages without downloading a special app or membership.



Place cup in dispenser and push lever for ice.

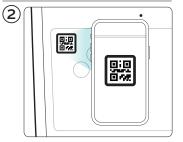

Scan QR code using smartphone camera. Be sure to hold your phone in front of the QR code.

NOTE: Do not hold it lower than the dispenser screen.



Select desired brand and drink.



Press "hold to pour" button and release it to stop. Keep button pressed until cup is full. COCA-COLA FREESTYLE® 7000 | OPERATIONS

Filling the ice bin

How to check and fill the ice bin

Maintaining the proper ice level is critical to ensuring guests receive a quality beverage.


1

Check to ensure ice is at least ¹/₃ full at all times. For a top-mount ice maker, follow established procedures for checking ice level. Fill the ice bin by following these steps.


Fill a clean bucket with ice and open ice bin lid.

Store-bought or "bagged ice" should NEVER be used as it may seriously damage the Coca-Cola Freestyle[®] 7000 dispenser ice bin.



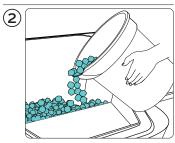


Dump the ice in the ice bin and fill until full (approximately 2" from the top). Do NOT overfill.

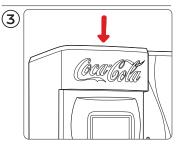

Close ice bin lid.

Accessing the Ingredient Summary and Crew Dashboard

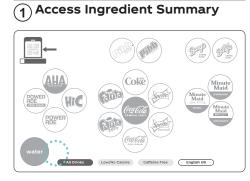

Pour Screen & secret handshake

On the all brands consumer screen, press your index finger to the lower left side of the screen to the right of the water icon. Hold for approximately 5-6 seconds to launch the Ingredient Summary screen.

The Ingredient Summary screen can also be accessed by opening the cartridge access door.

2 Access	Crew	Dashb	oard
----------	------	-------	------

High Priority	2/2
Dana Anna Anna Anna Anna Anna Anna Anna	
Action Required	
E Sanara Sanara Sanara Sanara	
Low Levels	
Lana Lana	
SK. ● 0000	

Ingredient Summary

From the Ingredient Summary screen - press the Details Button 🎟 to open the Crew Dashboard.

shboard Notific	ations About				Nap Lock Help	_ <u>&</u> _
IT NUMBER	110 Ing Balatian AA	III Panla	III Ing Belution CC	17 Sprite Part 2	III Pikk Part2	HFCS
9 days	6 days	6 days	6 days	6 days	6 days	
395	78%	25%	785	68%	62N	
] [Water
III Drange	St Cherry	11 Leman	12 Vanilla	III HIC		
9 days		6 days	15 hours	6 days		
385		51%	12%	77%		
arijeg by Manager	Seld Out	arijeg by Marian VV		arting by and how we		Sparklin Water
A Cosa Cala Paris 1	All Bargs Part 1	All Barrys Part 2	ALL Diet Calle Part 1	AT Diet Cake Part 2	All Cole Zero Part 2	
2 hours		7 days	7 days	6 days	13 hours	
<u>65</u>		675	785	60%	1816	lice
arity by	Prime Required	with the	anista ha	anipular.	atiny by ministry	
7 dava	6 days					
remaining	remaining					
78%	60%					

Return to Pour Screen

Crew Dashboard

Return to the pour screen, press the Exit Button at the top right, and continue to follow the on-screen instructions.



COCA-COLA FREESTYLE® 7000 | OPERATIONS

Understanding the Ingredient Summary

A High Priority

Items requiring immediate attention to resume function. Reach out to the support team for assistance at 1-800-241-COKE (2653). In Canada, call 1-800-318-COKE (2653).

B Action Required

Items requiring action:

- Change the cartridge if the ingredient is shown in a red sold out status.
- Select the Prime All Button to prime the lines for the orange prime required gauges.

C Low Levels

Highlights ingredients (less than 20%) that are running low and will need to be replaced soon.

D Details


Use to access the Crew Dashboard.

Back to Pour Screen (Close)

To return to the Pour Screen, select Close 8 or the Back to Pour Screen Button.

Remember, the product door must be closed to get back to pour screen.

If the Ingredient Summary screen or crew dashboard has not been accessed within the past 24 hours, a cleaning instructions screen will appear (right).

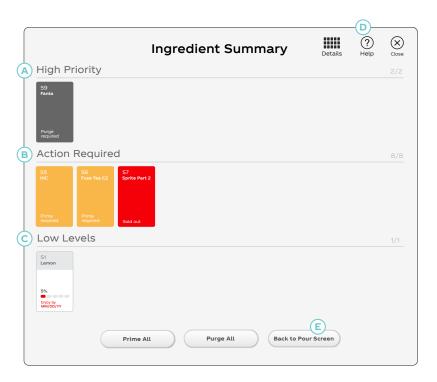


Understanding the Crew Dashboard

When crew members require a complete view of the status of all inaredients, the crew dashboard screen can be accessed.

Bold Alerts

Review items requiring attention to resume ingredient function, such as sold out, prime, or purge.

Contact the support team if vou need assistance at 1-800-241-COKE (2653). In Canada, call 1-800-318-COKE (2653)

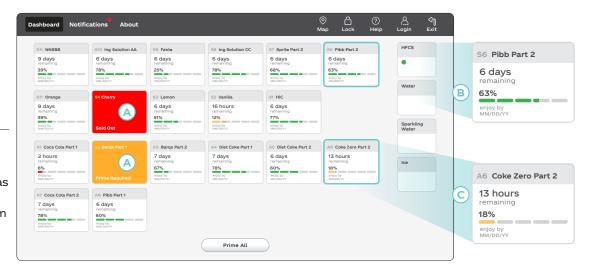

B Fuel Gauges

Color-coded gauges displaying the remaining product percentage and Enjoy By Date of each cartridge improve cartridge change-out management for crew members and reduce product waste.

The percentage remaining and time before changing the ingredient cartridge may vary significantly. For example, a flavor cartridge with 6% may have several days remaining, while a heavily used ingredient cartridge, like Coca-Cola, may last only a few hours with 6%.

C Time Remaining

A time remaining feature provides an accurate reading for when each cartridge will likely run out. This new feature is calculated using the dispenser's consumption activity and davpart data to deliver a dynamic and precise reading throughout the day.

COCA-COLA FREESTYLE® 7000 | OPERATIONS

Cartridge prime procedure

Priming an ingredient cartridge simply removes any trapped air in the line and ensures guests receive a consistent, quality beverage.

Dashboard Notific	ations About
CIT ANDER 9 dags sensorg 395. Strategiesen single of the sensor	EID ing Balation.8.8. 6 clays remaining 78% ******
UI Desege 9 dags terrations 29%	El Cherry Bald Out
Al Casa Cala Part I 2 hours tendong 40 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4	12 Bergs Part I
17 Cone Cole Part 3 7 Cays mendors 78%	0.0 Plate Part 1 6 days remaining 60%



(1) Confirm the cartridge has been inserted into the correct slot and press the Prime All Button at the bottom of the screen.

				ap Lock Help	க் அ Login ios
	10 Fanta	11 Institution CC	17 Sorts Part 2	LL Page Part 2	HPCE
	6 days	6 days meaning 78%	6 days senarcy 68%	6 days senarroy 62%	•
	and a	and the	and the second s	where the second	Water
ï	11 Lemm	12 Verille	U HS		
	6 days	16 hours	6 days		
I	87%	0%	77%		Eparking Water
5					
	2.1 Bargs Part 2 7 days	7 days	All Diet Coler Part 2 6 clavs	10 Cele Jew Part 3 13 hours	
	randring	ranaling Ten	14742-0179	ramaining	haw
	angles by Magnetics	arryny Ny Magazie yw	anging big- bigging big- bigging (11)	47(2) 102	
	0	Prime All)		
	Pri	me /	114)	

(2) When priming is complete, press $Exit \otimes$ in the top right of the screen. Follow the prompts on the pop-up to continue to the main screen.

2
Navigate to Consumer Interface
Are you sure you want to navigate to the consumer interface now?
Canal Cardina

NOTE: Only press the Prime All Button ONCE! Pressing it more than once will needlessly repeat the prime process.

REMINDER: The prime process lasts approximately 5-10 seconds depending on cartridge size, i.e., single or double. The process should NEVER be interrupted.

Manager lock mode

Manager lock mode

Managers can lock the Coca-Cola Freestyle dispenser to prevent drinks from being poured without having to manually power off the unit.



Access the crew dashboard. Then tap the 'Lock' icon in the top right corner.

A3 CFDIet Cole A	A5 Dist Color Color Zero Regar	AB Dr Papper B
	Dispenser Lockout	Science
	A	
UNTIL I UNLACK		disabled
Lock Until		05:00 AM (0
	Lock Dispenser	

There are two ways the dispenser can be locked:

- Manual setting: Slide the 'Until I Unlock' toggle switch to enable the manual unlock feature. Once enabled, the manager must enter the passcode to unlock.
- Time setting: Tap the button next to 'Lock Until' and set a time for the dispenser to unlock automatically when 'Until I Unlock' is disabled.

Enter Pa	ISSI	wore	d to U	nlock	
				۲	
	1	2	3		
	4	5	6		
	7	8	9		
		0	4		
		unlock			
	Enter Pa	1 4 7		1 2 3 4 6 6 7 6 9	1 2 3 4 5 6 7 8 9 . 0 4

Once the dispenser is locked, you may unlock the user interface by using the manager passcode (2653). COCA-COLA FREESTYLE® 7000 | OPERATIONS

Calorie counter display

How to enable the calorie counter display feature

To comply with the FDA menu-labeling regulations for chain establishments with 20 or more outlets, calorie counter must be accessible.

(1)	A3 CfDiel Colle A	AS Divil Color		2	Zers Tuger	A9 Or Papper	
		Enter	Pass	wor	d to L	Jnlock	
						æ	
1			1	2	3		
			4	5	6		
			7	8	9		
				0	4		
				unlock			
		Water .					

Access crew dashboard. Tap login, in the header, and type the manager passcode 2653.

			_	Drink Name							3 60.p
						XL					
1		2	3	4	6	6	7	8	9	0	
	٩	•	v	ε	e -	T	Y	v		0	P
		•	8	D	۲	0	н	J	к	L	
		e	×	c	v	8	N	м			*
					Space			En	ter		

TIP: Create custom names and sizes by tapping on the drink name or portion size to adjust. Then click exit to return to the consumer interface.

Regions Dispenser Profile	Service Mode Apps Advanced
Service Mode	547
caloric display	
caloric display	dualitied (
screen transitions	
Attract	1 min 1 after Home is idle enabled
Home	8 sec 8 after p
"Are you still there?"	13 bec 8 train
ADA Home	30 sec 8 after s
ADA "Are you still there?"	30 sec 1 inc

Select settings and then choose Service Mode in the secondary navigation.

Service Mode	5	elf
caloric display		_
caloric display		enabled
K portion size 8 oz	1	enabled
S portion size 10 oz		enabled
M portion size 12 oz		enabled
L portion size 20 oz	1	enabled
XL portion size 24 oz		disabled (

Slide caloric display toggle to enable to activate. Slide toggle icons to create a portion size. Green/right is enabled; Gray/left is disabled.

NOTE: The initial setting for the caloric display feature will be disabled.

Using & pairing with myCoke mobile app

myCoke Mobile App

Enables crew members to monitor dispenser ingredients via their smart devices, with no disruption to dispenser function. It helps crews efficiently maintain the dispenser by notifying them of required cartridge change-outs & cleaning tasks.

My Equipment

Shows the status of all machines in a particular outlet.

Ingredient Status Gauges

Highlights important information such as sold-out product, prime needed, and time remaining.

Cleaning Check Lists


Syncs status of cleaning and maintenance tasks between crew members.

About

Provides specific and detailed information for each dispenser.

Training

Creates easy access for crew to platform-specific training materials and troubleshooting guides on Crew Connect.

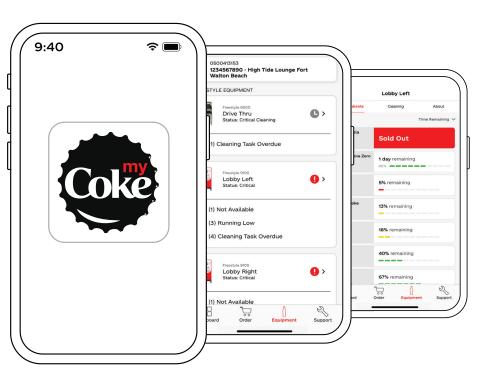


COCA-COLA FREESTYLE® 7000 | OPERATIONS

(2)

(4

Using & pairing with myCoke mobile app

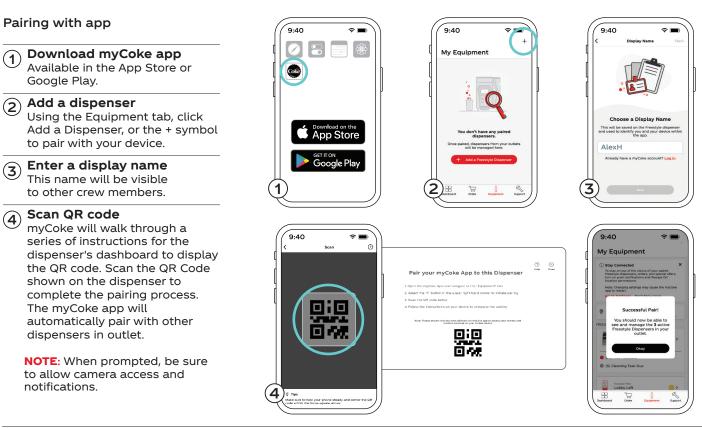

Replacing cartridges and NNS

Replacing ingredient cartridges or NNS starts with knowing when a cartridge or NNS is empty or unavailable.





A6 Sprite

remaining

18%

enjoy by MM/DD/YY


button is grayed out and will say "Not Available" when selected.

(2) View the amount of ingredient remaining within 13 hours each cartridge or NNS by accessing the dashboard

> Reference the level indicator next to the brand.

NOTE: Time remaining is an estimate based on historical consumption data. This feature may take up to three weeks after install.

For best practices regarding cartridge maintenance, see page 28. $(\mathbf{3})$ Remove the cartridge trav with empty ingredient cartridge from the dispenser.



with dish soap, followed by approved sanitizer solution (Kay-5 Sanitizer®).







5 Using the cartridge slot cleaning tool (part #149324 and #149325). clean the cartridge slot area. Dip a clean cloth


in approved sanitizer solution. wipe the probes (that insert into cartridges), then dip a new clean cloth into the sanitizer solution and wipe the probes again to sanitize.

(6) Open new cartridge using perforated cartridge opening flap.


> CAUTION: DO NOT use a sharp object to open.



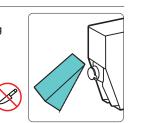



(7) Remove (outer) white dust-cap prior to placing cartridge into plastic tray.



(8) Place ingredient cartridge into plastic tray and ensure plastic fitment from cartridge pouch aligns with tray.




(10) Remove foil safety seal prior to inserting into the dispenser.

9

NNS (Non-Nutritive Sweetener) is used for all low/no-calorie beverages. NNS arrive in SmartPAK[™] cartridge and is replaced just like other ingredient cartridges. They will always be in the number one (1) or top slot in the cartridge shelf.

 $(\mathbf{1})$

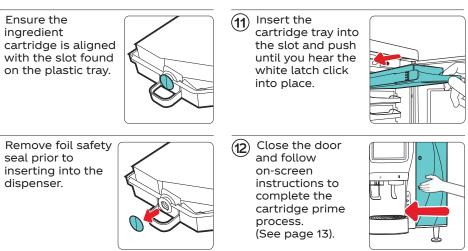

Always replace any missing or damaged plastic trays immediately to prevent dispensing issues. Plastic trays can be ordered by calling 1-800-241-COKE (2655). In Canada, call 1-800-318-COKE (2655)

Replacing HFCS (high fructose corn syrup)

When to replace HFCS

There are several ways to determine if the HFCS BIB (bag-in-box) needs to be replaced.

Pour screen

All sweetened beverage buttons will be graved out.

Ingredient summary page


The HFCS BIB square will turn red and feature the message "HFCS Sold out."

Resetting HFCS

Once the HFCS new HFCS box is installed, press the red HFCS Sold out box to reset, and the prime function will automatically follow.


Replacing HFCS and cleaning connector








check product is within the Enjoy Bv Date.









to the fitment and turn clockwise to tiahten.

(4) Scrub using the

nozzle brush

and soak in

approved

(#149326)

blunt end of the

sanitizer solution

(Kay-5 Sanitizer®)

(5) Open the box and pull out the

fitment.

CAUTION:


DO NOT

use a

Wait two minutes and repeat with

clean sanitizer, then air dry.

X



STATES SPECIAL MORENESS



COCA-COLA FREESTYLE® 7000 | PRODUCT REPLACEMENT

Coca-Cola Freestyle[®] Boost (optional equipment)

page 22.

Add additional brands to your 7000 dispenser with Coca-Cola Freestyle® Boost.

Brands currently available

- Barg's Olde Style Root Beer
- Minute Maid Lemonade with Real Sugar
- vitaminwater XXX
- vitaminwater XXX Zero





Under the counter BIB Boost Tray

BIB Booster




How to replace a Coca-Cola Freestyle[®] Boost BIB

When a Boost BIB package is sold out, it will appear in a similar manner as sold-out cartridges.

(2) Manually replace the Boost BIB package. For instructions, refer to

 $(\mathbf{3})$ Once the BIB is replaced, tap on the ingredient location to reset.

(4) Once successfully reset, the Boost BIB indicator will change to a

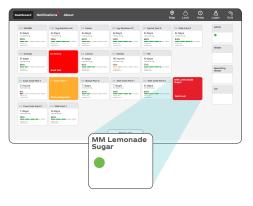

Coca-Cola Freestyle[®] **Boost** (optional equipment)

When to replace NNS BIB

There are several ways to determine if the NNS BIB (bag-in-box) needs to be replaced.

Pour screen

All low/no-calorie beverage buttons will be grayed out.


Ingredient summary page

The NNS square will turn red and feature the message "NNS Sold out."


Sold out


NNS

Replacing under the counter NNS BIB

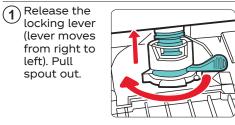

2 Remove empty NNS package and follow instructions for cleaning the NNS compartment and connector.

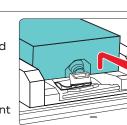


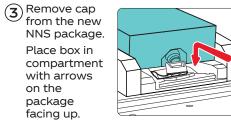

NOTE: Always check product is within the Enjoy By Date.

(4) Reattach the NNS connector then move the lever to secure.

on the

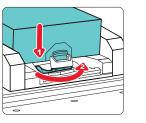

COCA-COLA FREESTYLE® 7000 | MAINTENANCE Helpful cleaning tips

Coca-Cola recommends Kay-5° Sanitizer, or a comparable food-grade chlorine sanitizer.

If using Kay-5 Sanitizer, add 1oz (28.4g) packet of Kay-5 Sanitizer to 21/2-gallons (9.5L) of fresh, warm water in a clean bucket.




When using a chlorinated detergent other than Kay-5 Sanitizer, follow the instructions to produce a 100 ppm chlorine sanitizer solution.

Kay-5 Sanitizer, cleaning brush and replacement nozzle can be ordered by calling 1-800-241-COKE (2653). In Canada, call 1-800-318-COKE (2653)

Follow same cleaning practices for NNS BIB as HFCS BIB (page 20).




Cleaning nozzle, injector ring and ice chute

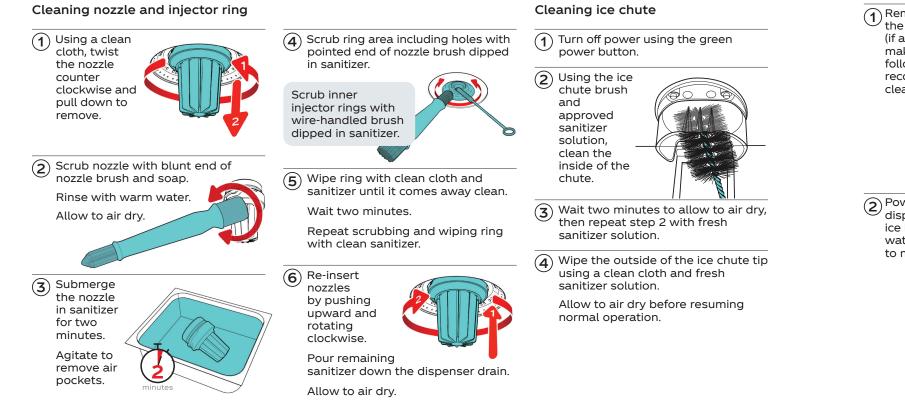

COCA-COLA FREESTYLE® 7000 | MAINTENANCE

Cleaning ice bin


Remove all ice by using the dispense lever (if a top-mounted ice maker is installed, follow manufacturer's recommendation for cleaning).

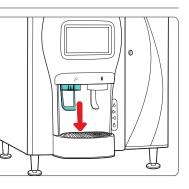

Power off and unplug the dispenser. Remove the ice bin lid and pour warm water slowly into the bin to melt the remaining ice.




3 Spray approved sanitizer solution (Kay-5) onto all internal surfaces of ice bin and both sides of ice bin lid. Wipe or scrub areas within reach inside the bin with either a clean cloth or an ice bin brush (small parts #149322).

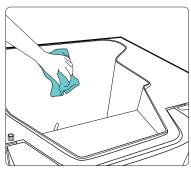


(4) Spray approved sanitizer solution on all internal surfaces and lid again, allow draining and air drv. Return to normal operation.


> **NOTE:** For complete disassembly instructions, contact your Coke representative.

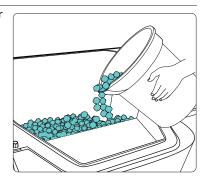

Cleaning drain and cup rest


Cleaning exterior surfaces

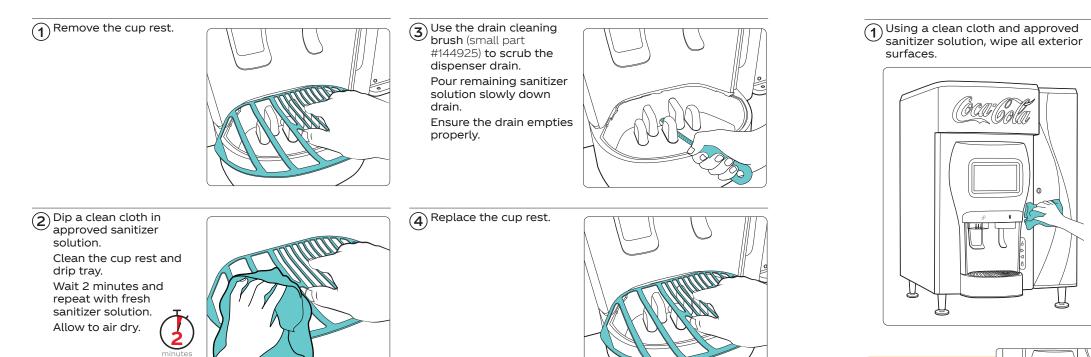





Crew should frequently clean areas that accumulate drips such as backsplash.





Cartridge maintenance

SmartPAKTM (paperboard) cartridges are lightweight, recyclable, and designed to optimize backroom storage space.

Inventory and quick replacements

- Be prepared during rush periods! Place fast-moving ingredient cartridges in extra trays and stage near dispenser for fast change outs.
- Use your oldest ingredient cartridges on hand first, i.e. "First-in, First-out."
- Always ensure ingredient cartridges are organized by "Enjoy By Date" to effectively manage inventory.

Cartridge trays

The Coca-Cola Freestyle 7000 uses the black plastic, push-click cartridge trays. The trays are designed to hold a single ingredient cartridge.

Storage conditions

Avoid storing cartridges and plastic trays near any heat source, standing water, or cleaning solutions.

Cleaning trays

Push-click cartridge trays should be 'hand washed' before insertion of a cartridge. **NEVER PLACE IN A DISHWASHER.** Placing trays in a dishwasher may warp the trays over time. Use dish soap, followed by Kay-5 Sanitizer® or approved equivalent and allow to air dry.

COCA-COLA FREESTYLE® 7000 | RESOURCES

Small parts

Customers may order up to \$25 worth of the following small parts per location.*

To request a small parts order, call the support team at 1-800-241-COKE (2653). In Canada, call 1-800-318-COKE (2653). More information can be found at crewconnect.coca-cola.com.





Nozzle Tip #144700

Cartridge Tray #14110.3


Cartridge #141343



#1145555



#149326

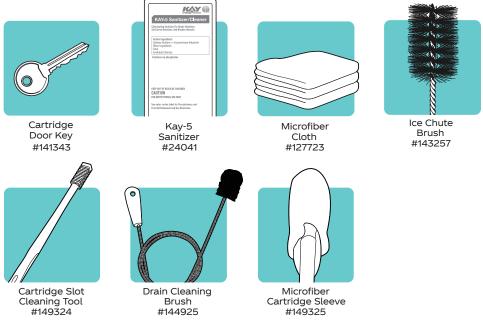

*NOTE: Shipping requests other than standard ground transportation may be charged to your outlet.

CREW CONNECT

We are committed to maximizing the operational and business performance of your Coca-Cola Freestyle[®] by providing your crew with the support they need.

Premium Support Solutions

TRAINING

Training resources to keep your crew in-the-know, from first installation, through new hires, to new upgrades in equipment or processes.

- » Live Crew Onboarding
- » Crew Connect
- » Crew Training Reference Guide
- » Troubleshooting Guides

TOOLS

Our materials and support infrastructure make maintenance and cleaning easier - and keep your dispensers running smoothly.

- » Small Parts **1-800-241-COKE** (2653) In Canada, call **1-800-318-COKE** (2653)
- » QR Video Decals
- » Crew Reminders & Checklists
- » On-Dispenser Instructions
- » myCoke app

SERVICE

We are constantly innovating to better serve your operational and business needs with 24 hours 7 days a week support at **1-800-241-COKE** (2653) and turnkey technological solutions. In Canada, call **1-800-318-COKE** (2653).

- » MyCokeTech
- » On-Site Service
- » Remote Software Diagnostics & Analytics

To find out what **Coca-Cola Freestyle Crew Connect** can do for your business, contact your Coca-Cola Sales Representative.



