
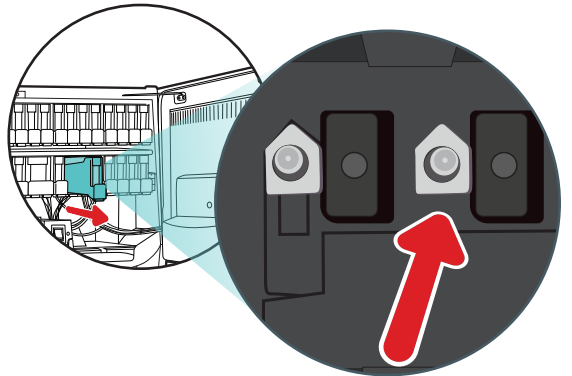
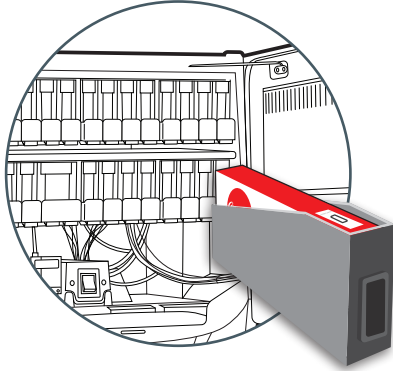


EVERY TIME

When replacing **ingredient cartridges** wipe **cartridge slots** or use cartridge slot cleaning tool.



Clean **cartridge probes** until the cloth comes away clean, repeat, then allow to air dry for 2 minutes.

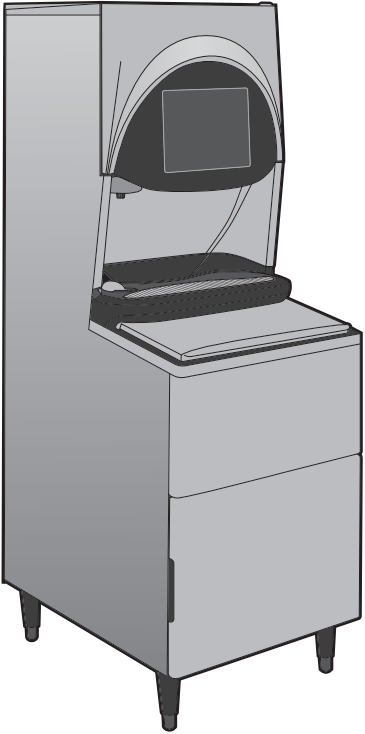

EVERY DAY

Wipe **interior and exterior surfaces**.


Clean, then sanitize **the nozzle and injector ring** you must soak the nozzle tip with food-grade sanitizer. Allow to air dry for 2 minutes.

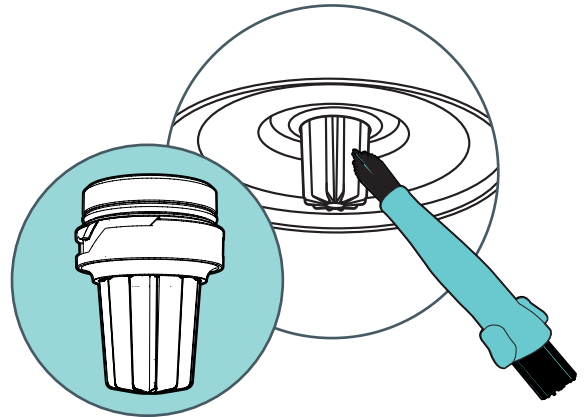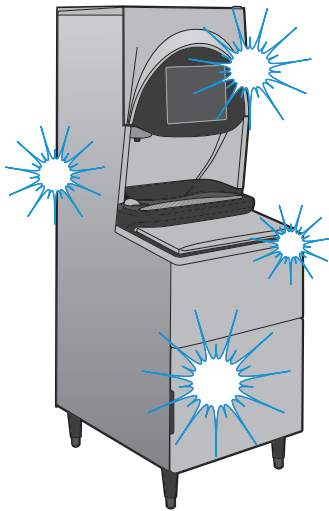


Need help or want to order small parts, call:

USA
1-800-241-COKE (2653)


Canada
1-800-318-COKE (2653)

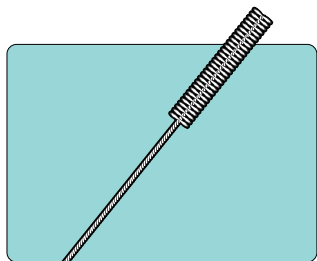


Wire Handled Nozzle Brush
#1145555

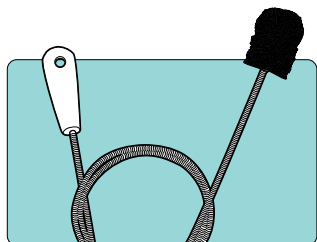

Drain Cleaning Brush
#144925

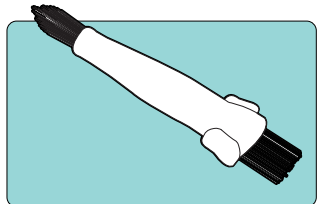


Nozzle & Injector Ring Brush
#149326

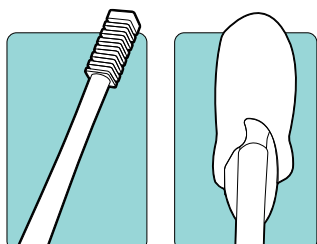

Cartridge Slot Cleaning Tool
#149324

Microfiber Cartridge Sleeve
#149325

Wash **cup rest and drip tray**. Scrub **dispenser drain** with drain cleaning brush. Pour the remaining sanitizer solution down the drain.

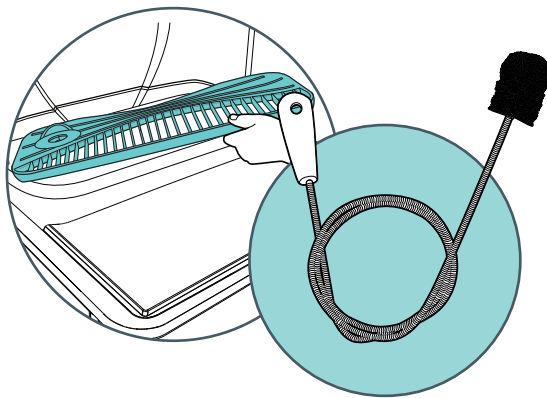


IMPORTANT

Always use approved food-grade sanitizer solution when cleaning your dispenser.

EVERY WEEK

Empty all ice and slowly pour warm water into the ice bin to melt any additional ice. Clean, then sanitize inside **the ice bin** with food grade sanitizer.

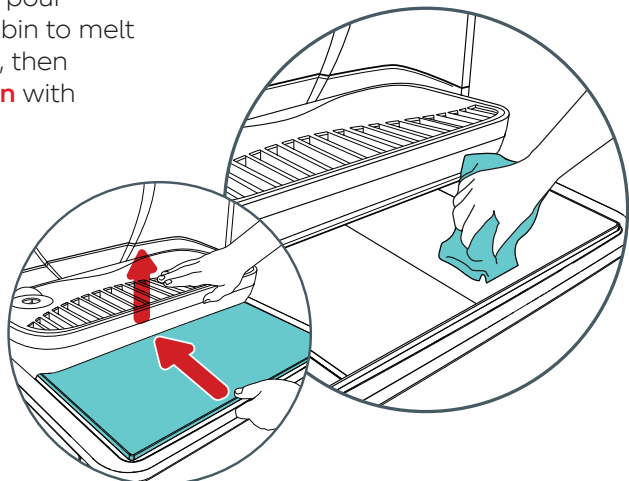

Refer to the 8000 User Guide for detailed cleaning and maintenance instructions