




# Coca-Cola freestyle 8100 | Cleaning Best Practices



## EVERY TIME

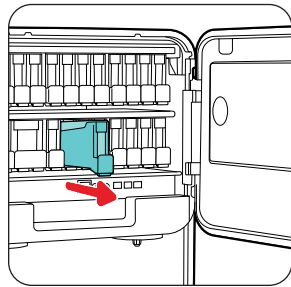


When replacing ingredient cartridges, wipe cartridge slots or the use cartridge slot cleaning tool.



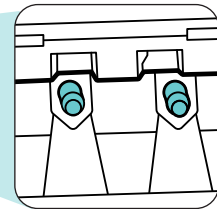
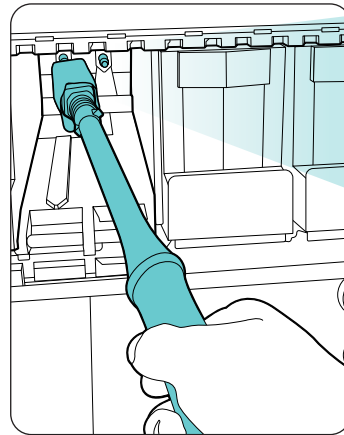


Dip a clean cloth in approved sanitizer solution and wipe the cartridge probes. Then, dip a new, clean cloth into the sanitizer solution, and wipe the probes again to sanitize.

## EVERY DAY

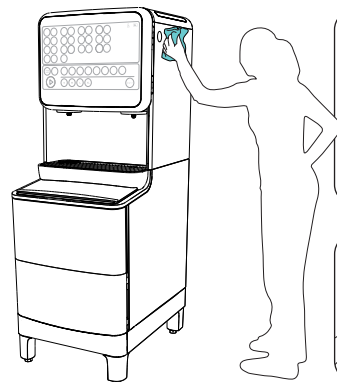


Wipe exterior surfaces and clean areas such as the backsplash, ice bin lid, edge of the ice bin, and touch screen.

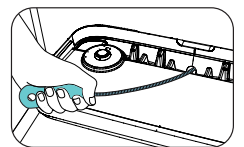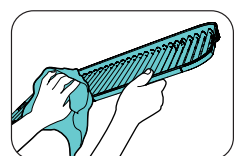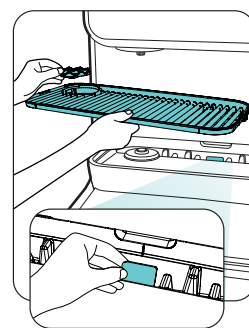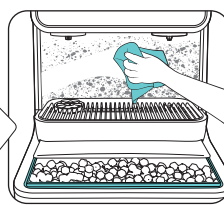


Remove the cup rest, scale cup rest, and drain strainer. Clean the cup rest, scale cup rest, and drip tray. Then use the drain cleaning brush (small part #144925) to scrub the dispenser drain.


- Using a clean cloth, twist both nozzles counter clockwise and pull down to remove.
- Scrub both ring areas including holes with pointed end of nozzle brush dipped in sanitizer.
- Scrub inner injector rings with wire handled brush dipped in sanitizer.
- Wipe rings with clean cloth and sanitizer until it comes away clean.
- Wait 2 minutes and repeat scrubbing and wiping rings with clean sanitizer.

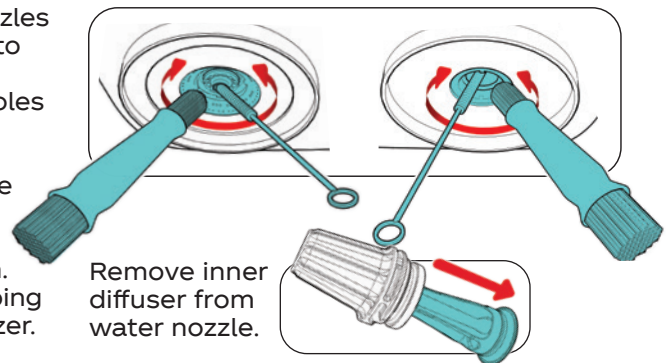

Remove inner diffuser from water nozzle.

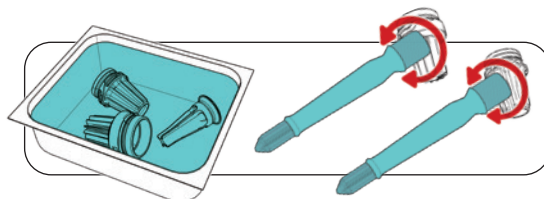

- Scrub both nozzles with blunt end of nozzle brush and soap.
- Rinse with warm water and allow to air dry.
- Submerge all parts in sanitizer for 2 minutes. Agitate to remove air pockets.

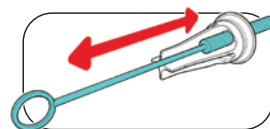


Use wire handled brush to scrub holes in the diffuser.


**!** Always use approved food grade sanitizer solution when cleaning your dispenser.



## EVERY WEEK

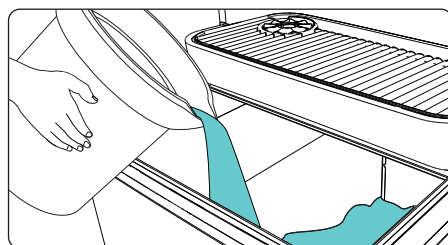


Empty all ice and slowly pour warm water into the ice bin to melt any remaining ice.

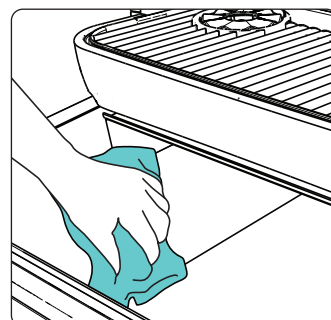


Dip a clean cloth in approved sanitizer solution and wipe inside of the ice bin and ice bin lid. Wait 2 minutes and repeat with fresh sanitizer solution.




Refer to the 8100 User Guide for detailed cleaning and maintenance instructions

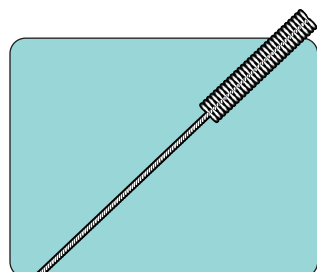


Wire Handled Nozzle Brush #1145555

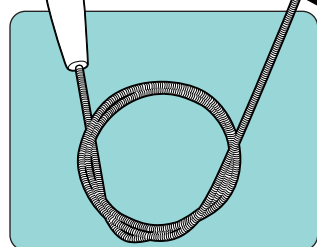


Drain Cleaning Brush #144925

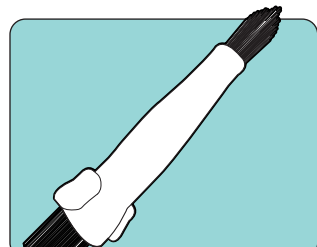

Nozzle & Injector Ring Brush #149326

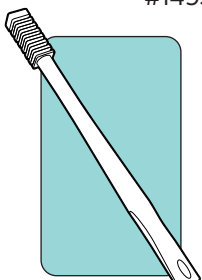

Cartridge Slot Cleaning Tool #149324

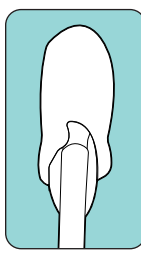

Microfiber Cartridge Sleeve #149325