




MINUTE MAID JUICE DISPENSER BIMONTHLY CLEANING & SANITIZATION PROCEDURES


TOOLS YOU WILL NEED:

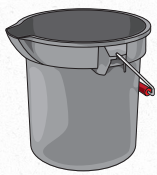

Clean 3
Gallon Bucket



Approved Sanitizer

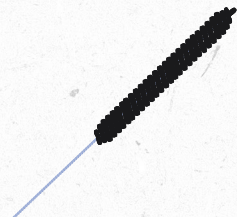

Nozzle Brush




Clean Cloths

! IMPORTANT: DO NOT run nozzles, drip pan or other small parts through a dishwasher and **DO NOT USE HOT WATER or BLEACH.**

Bimonthly Cleaning the valves and components



1 Wash hands with soap and water, and prepare approved sanitizer in a clean bucket.

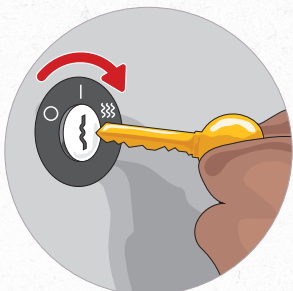


2 Turn key to **FLUSH** position.




3 Press the **PUSH** button to flush each valve until only clear water is dispensed.



4 Open dispenser doors by pressing **#** button on door panel, then lifting door.

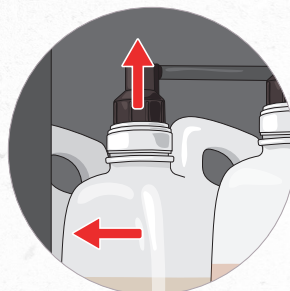


5 Pull up check valve from Minute Pak. Remove Minute Pak container and refrigerate.

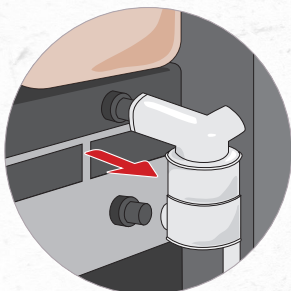

6 Remove nozzles and wash in approved sanitizer solution with brush.




7 Rinse nozzles in water. After drying, reinstall nozzles.

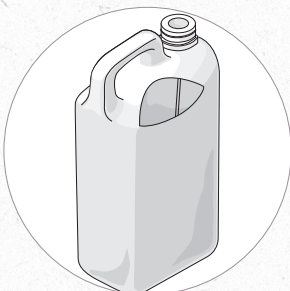


8 Fill the approved sanitizer container with approved sanitizer.




9 Place in dispenser and replace check valve.

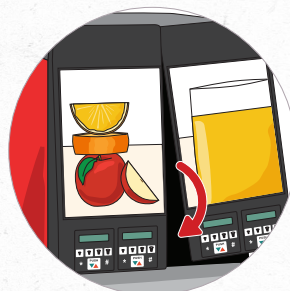

10 Close all doors.

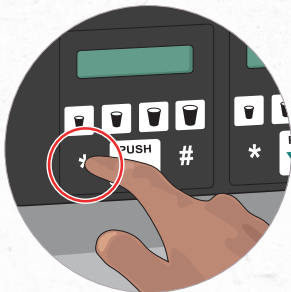

11 Press ***** button for 2 min to ensure lines are full of approved sanitizer.

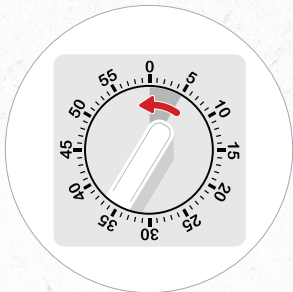

12 Let solution sit for 5 min before dispensing.




13 Remove check valve and approved sanitizer container.



IMPORTANT


Repeat Steps 9-13 for each juice dispenser valve to ensure thoroughly cleaned.

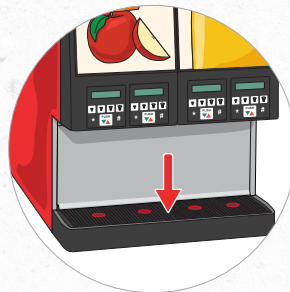


14 Pour out any remaining approved sanitizer solution.



15 Open dispenser doors by pressing **#** button on door panel, then lifting door.

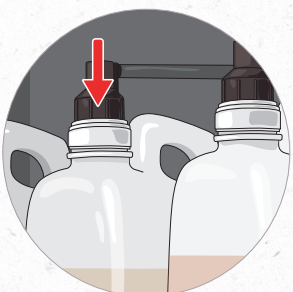

16 Reinstall Minute Pak and check valve for each brand.

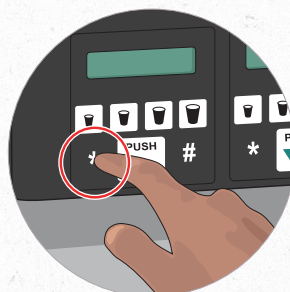


17 Press ***** button to prime each pump until only concentrate is dispensed.



IMPORTANT


A fresh water rinse cannot follow sanitization of equipment. Purge only with the end use product until there is no aftertaste. This is an NSF requirement. Residual sanitizing solution can cause health hazards.

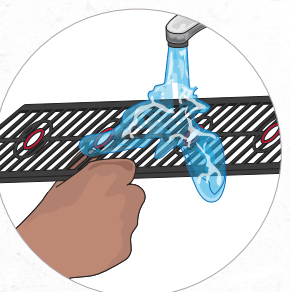

18 Remove and wash drip tray and cup rest in approved sanitizer solution.




19 Rinse with warm water and reinstall drip tray and cup rest.

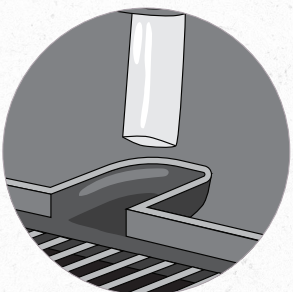

20 Ensure drain tube into drip tray is properly seated.



21 Wipe down any areas where concentrate may have spilled.

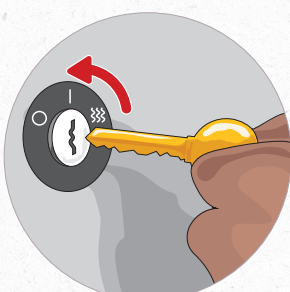

22 Turn key to **ON** mode and pour 2 ounces of drink to fill nozzle.

NEED ASSISTANCE? The myCoketech Team is here to help.
Go to myCoke.com/ESPortal or call/text 1-800-241-COKE (2653)

